

# QUICK CONNECT GUIDE

The main logo for DIRECTOR PRO, featuring a stylized blue and grey graphic above the text "DIRECTOR PRO".

For a complete guide of instructions, see the manual located on the Manual CD that was shipped with your system.

[www.mfdigital.com](http://www.mfdigital.com)

**Software Manual is  
located on Manuals CD  
packaged with your  
system.**

# SHIPMENT CONTENTS

Director Series Loader  
Serial Cable  
Power Cable

Director Pro PC  
15" LCD Monitor  
Keyboard & Mouse


LAN Connection Guide  
LAN Cable

Quick Connect Guide

User's Manual CD



System Backup Software CD

# Mounting & Connecting Your PicoJet 6000 Printer with the MF Digital Director Pro Series.

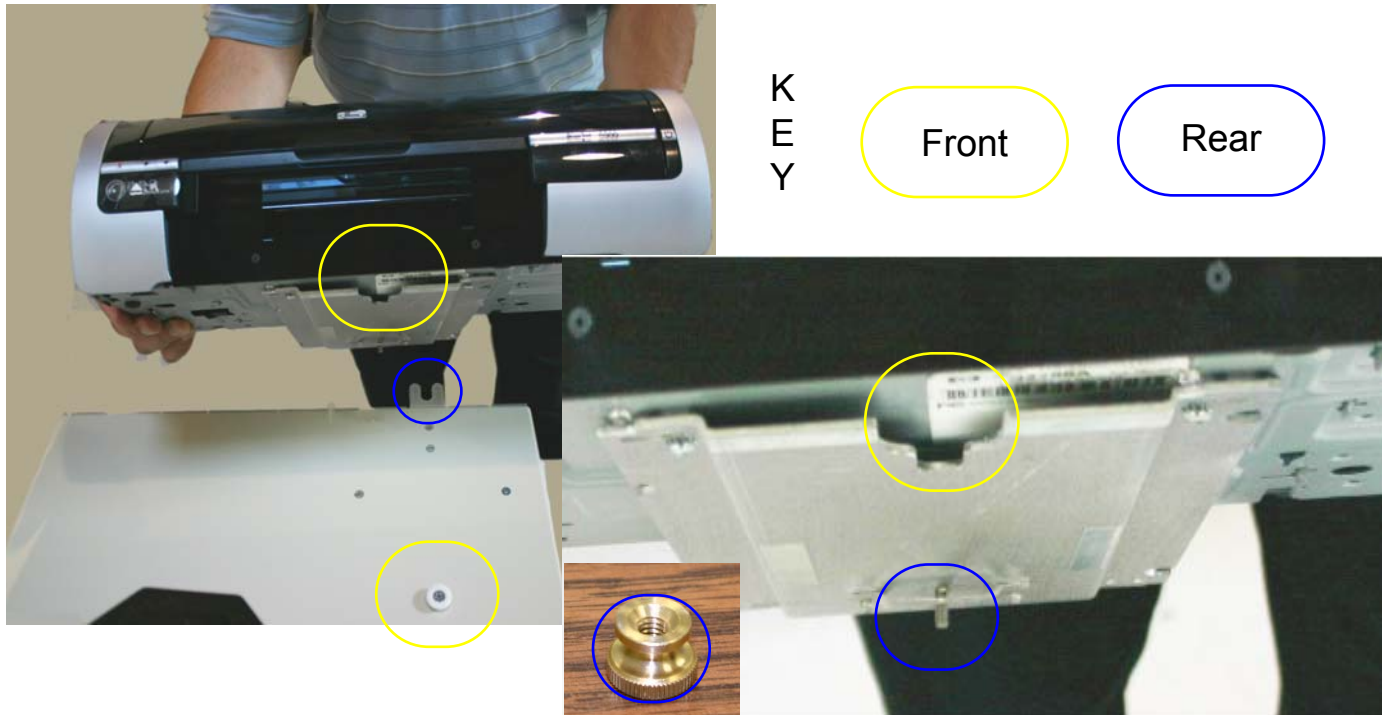

1. Locate the front of the mounting plate as indicated by the yellow circle in the picture on the right.
2. Slip the groove of the mounting plate around the white plastic knob. See picture above (yellow circle).
3. The threaded screw located at the rear of the mounting plate will line up with the "U" shaped housing located on the rear of the Director Pro Series Unit. See picture above (blue circle).
4. After mounting the Printer, be sure to push the printer all the way forward then use the Thumbscrew to secure the printer to the Director Pro Series Unit.

# How to Wire Your PicoJet 6000 Printer with the MF Digital Director Pro Series PC.

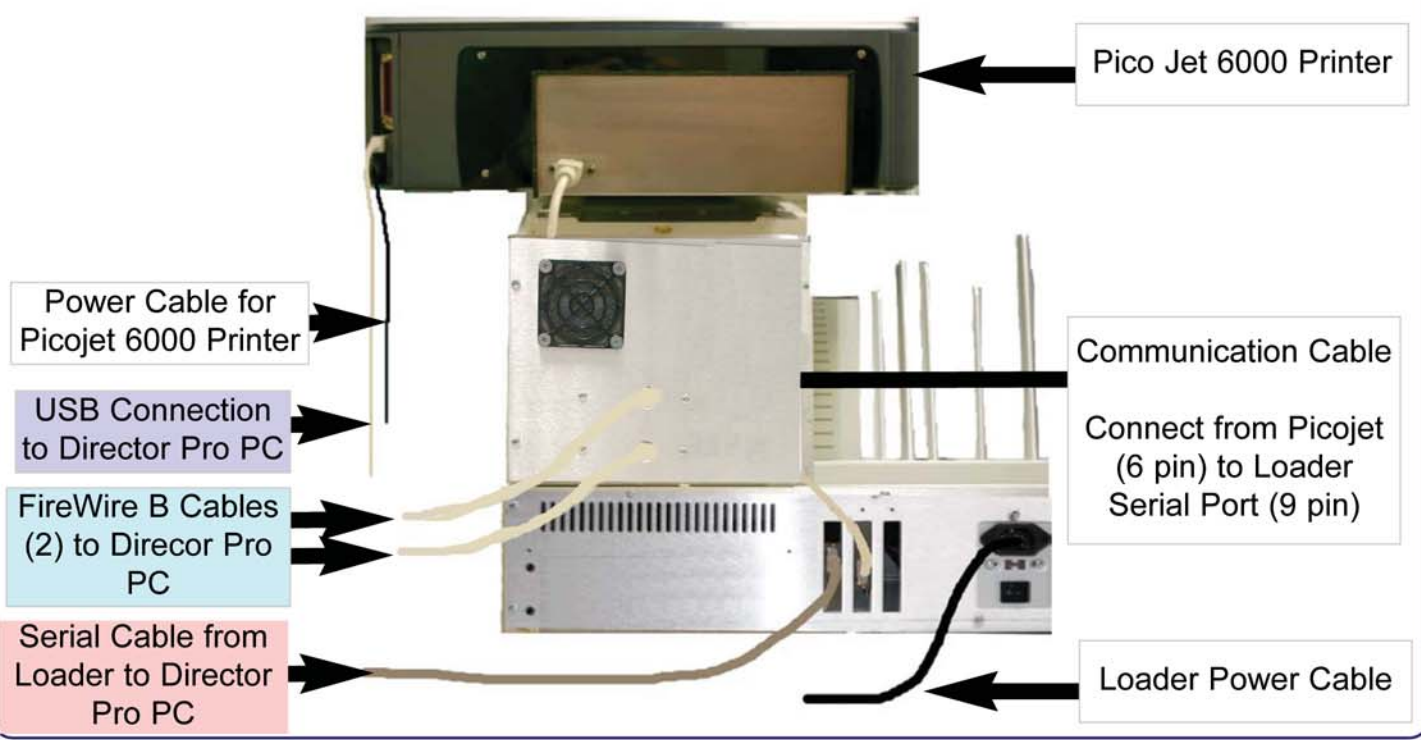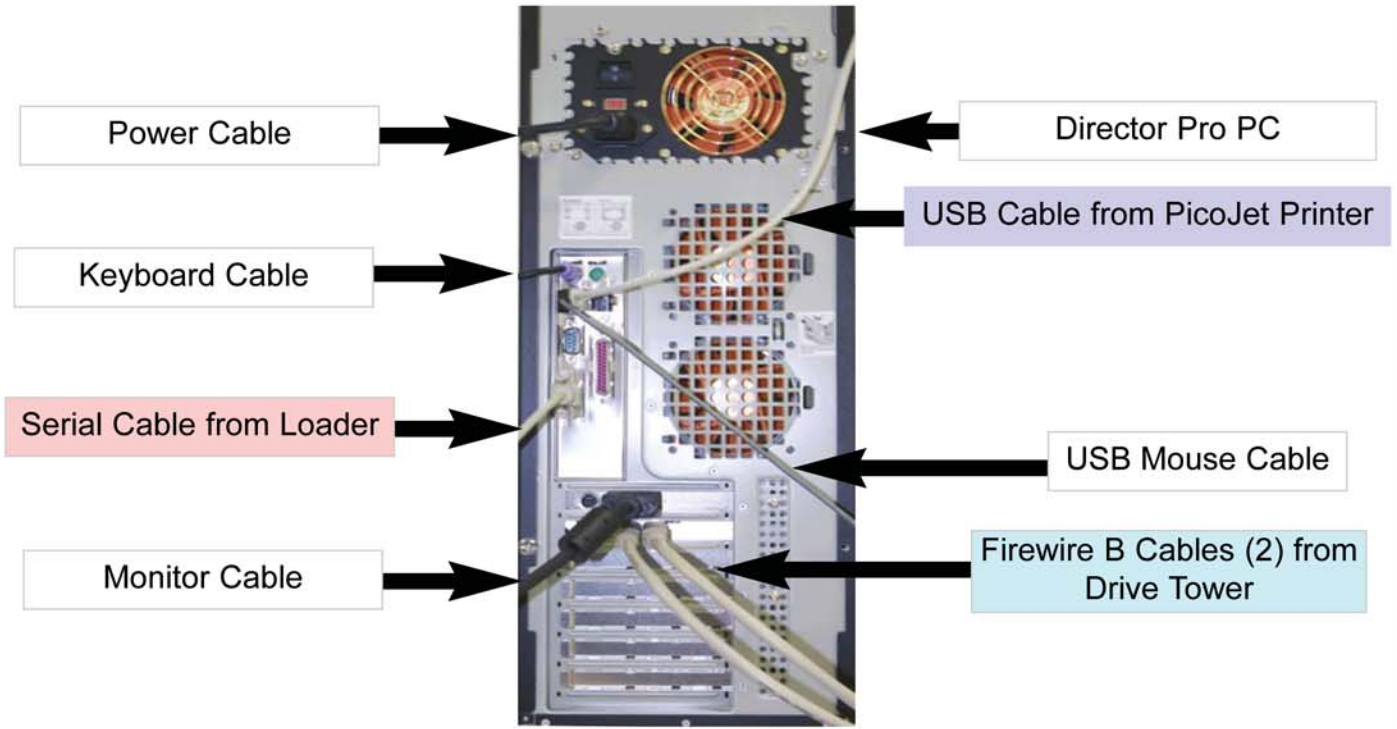


# Mounting & Connecting Your Prism Plus Printer with the MF Digital Director Pro Series.



K  
E  
Y



Front

Rear

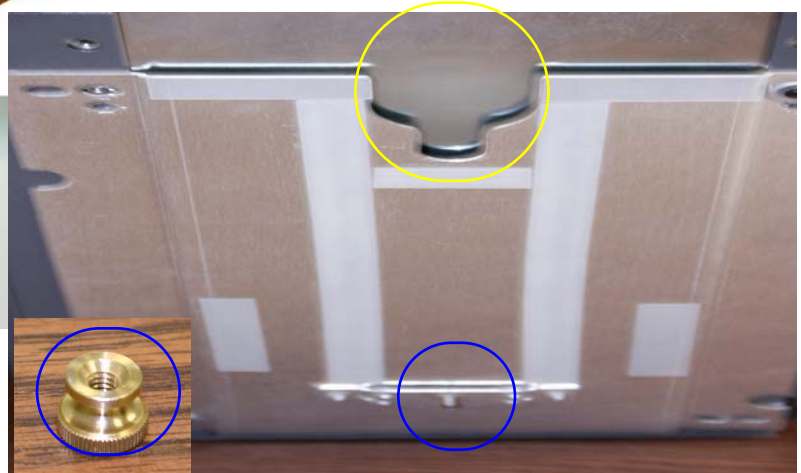


1. Locate the front of the mounting plate as indicated by the yellow circle in the picture on the right.
2. Slip the groove of the mounting plate around the white plastic knob. See picture above (yellow circle).
3. The threaded screw located at the rear of the mounting plate will line up with the "U" shaped housing located on the rear of the Director Pro Series Unit. See picture above (blue circle).
4. After mounting the Printer, be sure to push the printer all the way forward then use the Thumbscrew to secure the printer to the Director Pro Series Unit.

# How to Wire Your Prism Plus Printer with the MF Digital Director Pro Series PC.

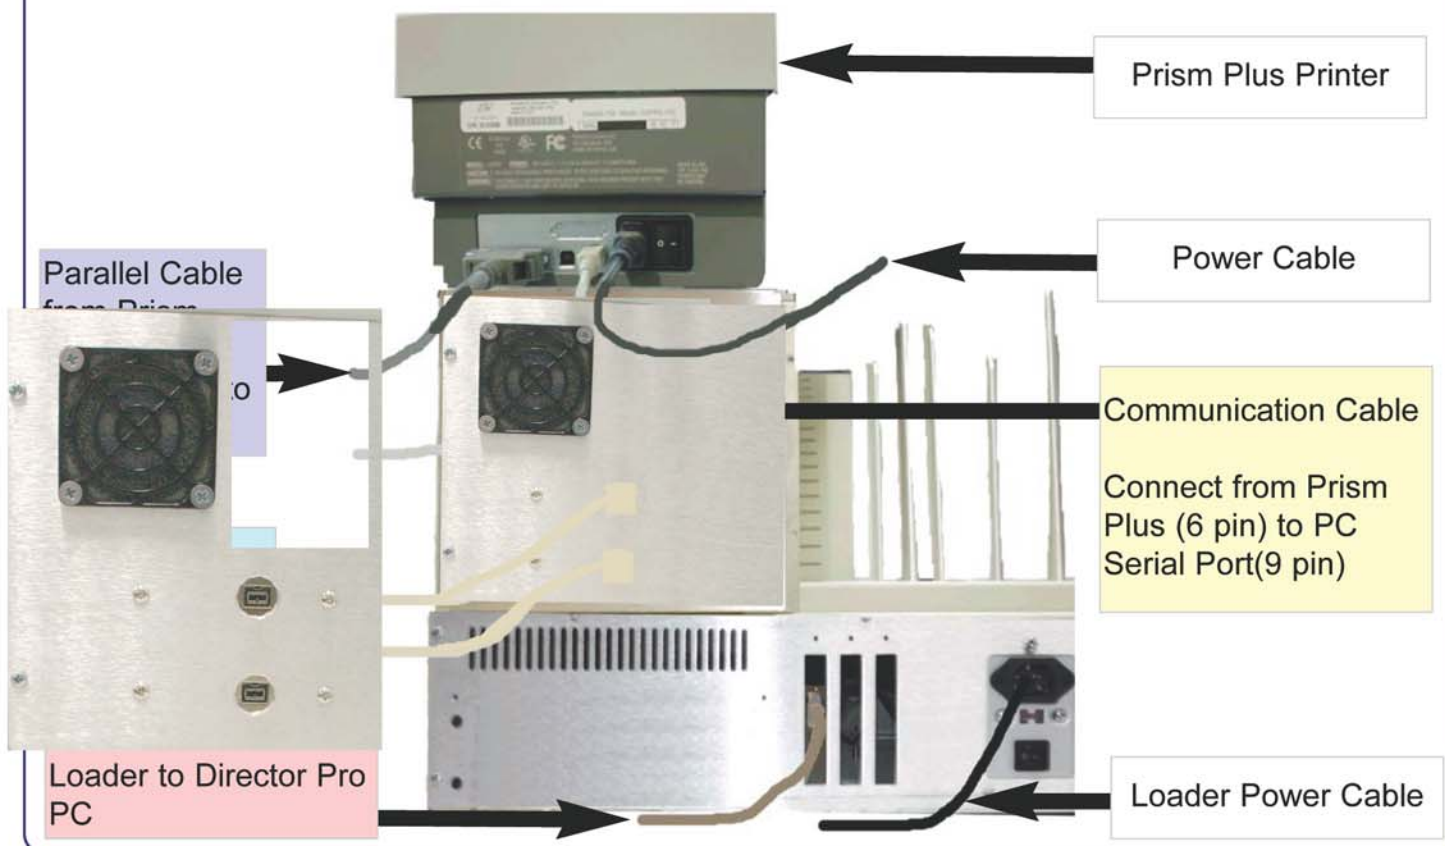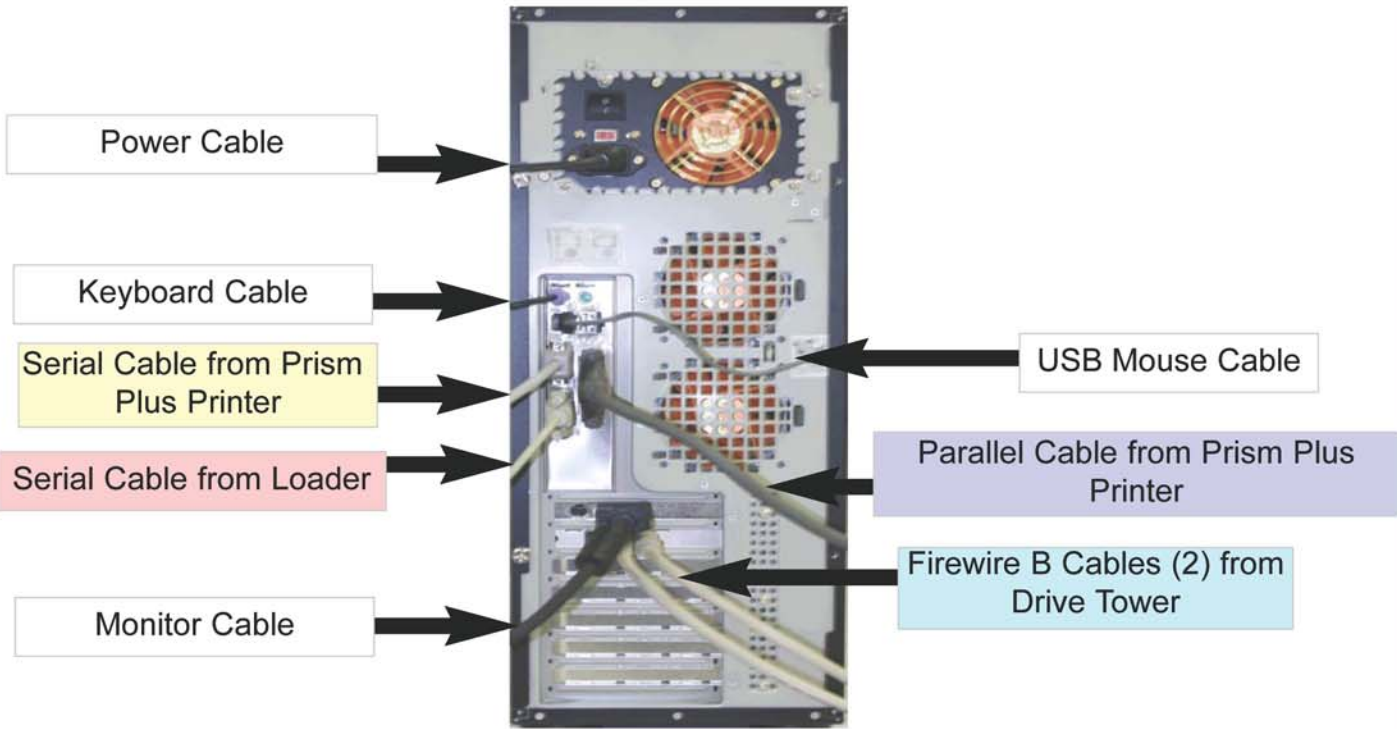

# **Genuine MF Digital Consumables**

## **Thermal Printer Supplies**

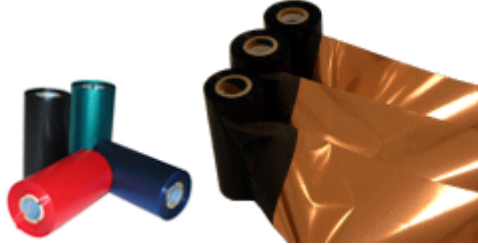

***Thermal CD/DVD Printer Ribbons  
The Gold Standard***

<b>Part#</b>	<b>Product Description</b>
CDP-PRN-BK	750' Black Ribbon for Prism Plus (Fine Line Print)
CDP-PRN-BLK	850' Black Ribbon for Spectrum 2 Printers
CDP-PRN-RED	656' Red Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-BLUE	656' Blue Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-GRN	656' Green Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-MULTI	656' Multi Ribbon for Prism Plus

## **Ink Jet Printer Supplies**



## **Inkjet CD/DVD Printer Cartridges**

<b>Part#</b>	<b>Product Description</b>
M56B	Black 19ml Ink Cartridge for PicoJet Inkjet Printer
M57C	Color 17ml Ink Cartridge for PicoJet Inkjet Printer
M58P	Photo 17ml Ink Cartridge for PicoJet Inkjet Printer