

QUICK CONNECT GUIDE

A large, stylized blue and grey wave graphic above the word "DIRECTOR" in a large, bold, blue, sans-serif font.

DIRECTOR



For a complete guide of instructions, see the manual located on the Manual CD that was shipped with your system.

www.mfdigital.com

**Software Manual is
located on Manuals CD
packaged with your
system.**

CARTON CONTENTS

Director Series Loader
Serial Cable
Power Cable

USB Software Card (v107)
w/ bracket and USB Cable


LAN Connection Guide
LAN Cable

Quick Connect Guide

User's Manual CD

System Backup Software CD


Mounting & Connecting Your PicoJet 6000 Printer with the MF Digital Director Series.

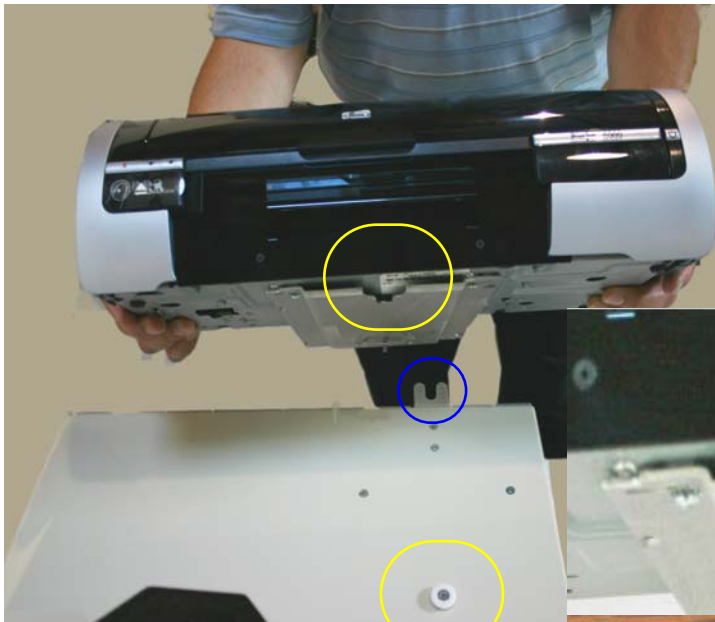

K
E
Y


Front

Rear

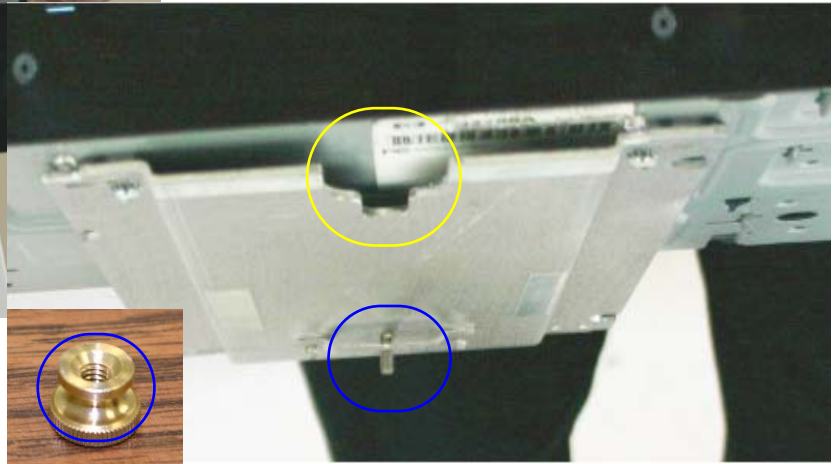

1. Locate the front of the mounting plate as indicated by the yellow circle to the right.
2. Slip the groove of the mounting plate around the white plastic knob. See picture above (yellow circle).
3. The threaded screw located at the rear of the mounting plate will line up with the "U" shaped housing located on the rear of the Director Series Unit. See picture above (blue circle).
4. After mounting the Printer, be sure to push the printer all the way forward then use the Thumbscrew to secure the printer to the Director Series Unit.
5. To wire your printer to the Director Series Unit, please follow the wiring diagram to the right.




PicoJet 6000
Printer

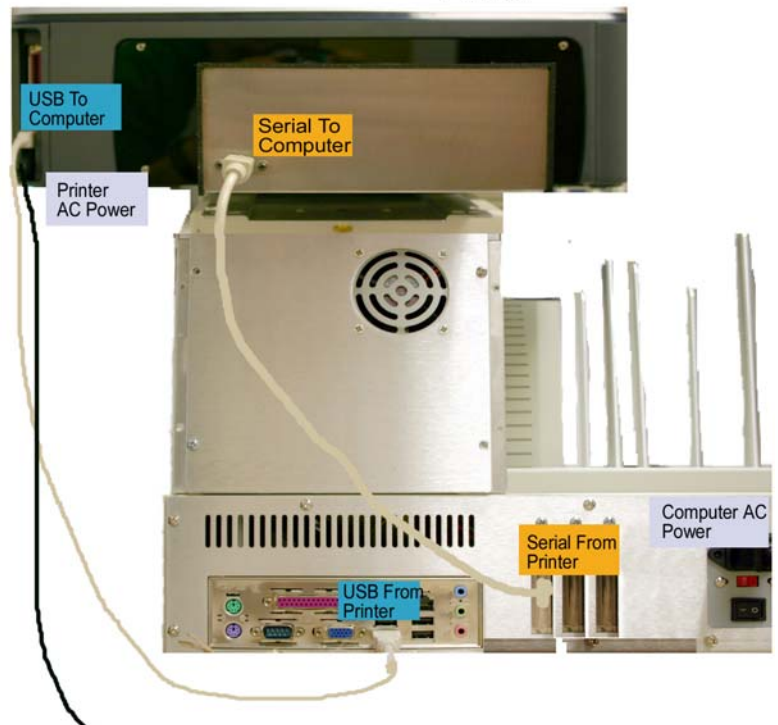


Mounting & Connecting Your Prism Plus Printer with the MF Digital Director Series.



  K
E
Y

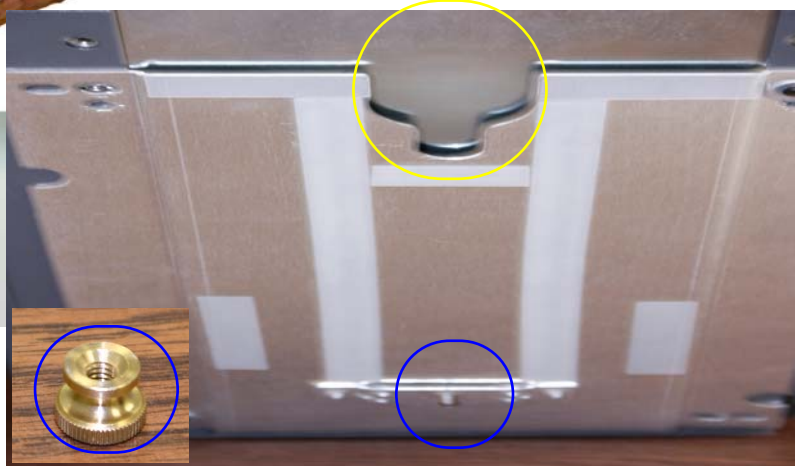

1. Locate the front of the mounting plate as indicated by the yellow circle to the right.
2. Slip the groove of the mounting plate around the white plastic knob. See picture above (yellow circle).
3. The threaded screw located at the rear of the mounting plate will line up with the "U" shaped housing located on the rear of the Director Series Unit. See picture above (blue circle).
4. After mounting the Printer, be sure to push the printer all the way forward then use the Thumbscrew to secure the printer to the Director Series Unit.
5. To wire your printer to the Director Series Unit, please follow the wiring diagram to the right.

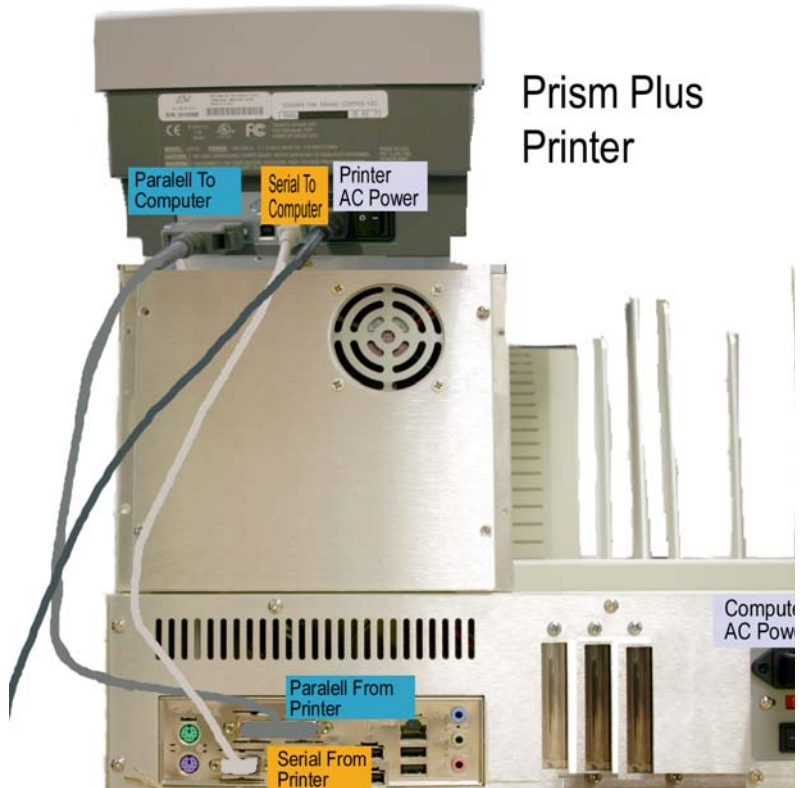


Prism Plus Printer

This page left blank intentionally.

This page left blank intentionally.

Genuine MF Digital Consumables

Thermal Printer Supplies

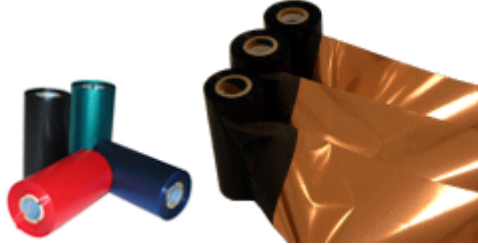

***Thermal CD/DVD Printer Ribbons
The Gold Standard***

Part#	Product Description
CDP-PRN-BK	750' Black Ribbon for Prism Plus (Fine Line Print)
CDP-PRN-BLK	850' Black Ribbon for Spectrum 2 Printers
CDP-PRN-RED	656' Red Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-BLUE	656' Blue Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-GRN	656' Green Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-MULTI	656' Multi Ribbon for Prism Plus

Ink Jet Printer Supplies



Inkjet CD/DVD Printer Cartridges

Part#	Product Description
M56B	Black 19ml Ink Cartridge for PicoJet Inkjet Printer
M57C	Color 17ml Ink Cartridge for PicoJet Inkjet Printer
M58P	Photo 17ml Ink Cartridge for PicoJet Inkjet Printer