



This screen indicates the steps the installation is working on. A progress bar is now shown as each step is executed.

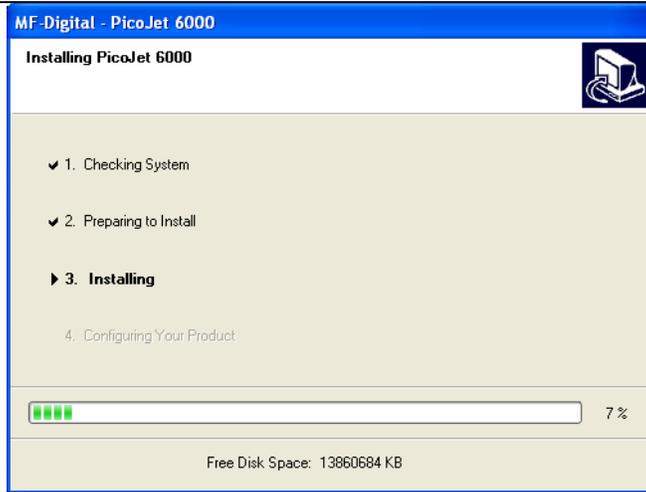

Should you receive the Windows XP Logo Testing prompt, please click the CONTINUE ANYWAY button.



You have completed Step #1.
Click Finish and reboot your computer.

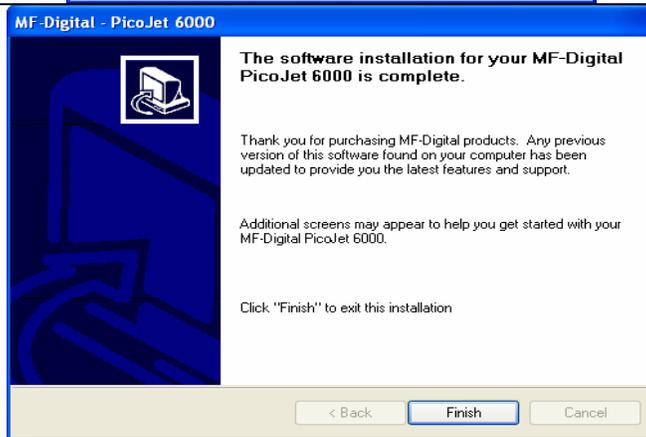

Step #2

When you're the loader's PC has reloaded Windows, connect the USB cable from your PicoJet 6000 Printer to your loader's USB port.

After the PicoJet is connected to the loader's PC. This screen appears.

Change the Option "Install from a specific location" by clicking the radial button.

Now Click NEXT.



On this screen, be sure there is a DOT in the Search for the best driver in these locations option.

Whether you're loading the drivers from the CD or if you downloaded the drivers from the website, the procedure is the same.


Click the browse button and navigate the path below.

X:/enu/drivers/win2kxp

Where X is location of the drive, where the drivers are stored. Then click OK. You will be returned to this screen. Now click NEXT.




This screen indicates the installation will begin the copying process of the driver files over to the loader's PC.

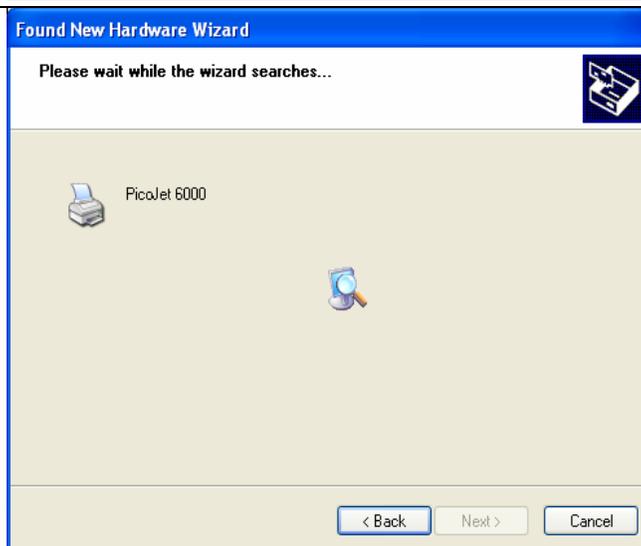

Should you receive the Windows XP Logo Testing prompt, please click the CONTINUE ANYWAY button.



The installation will now start to copy files to the loader's PC.

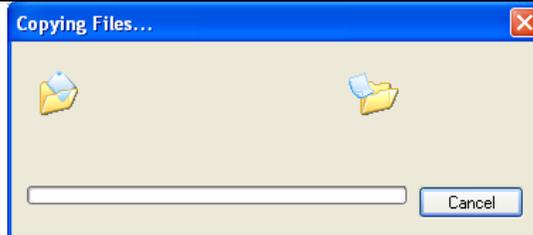


Installation is now complete.
Click FINISH.



You can verify the PicoJet is installed, by checking the following:


XP Users: (Printers and Faxes)

Win2K (Printers)

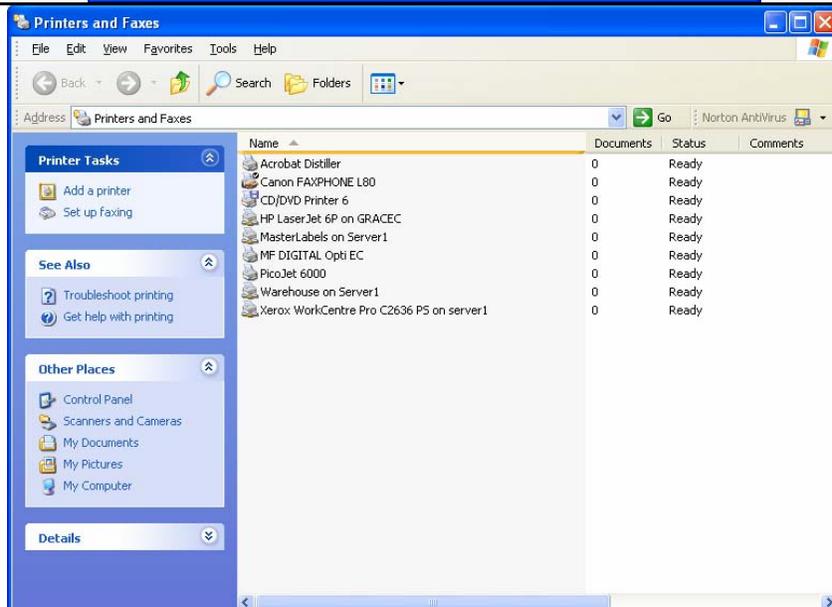

Right clicking on the PicoJet Icon and choosing Printing Preferences, then selecting the Utilities Tab will show the current revision of the drivers.

Note the info above the TEST PRINT button.

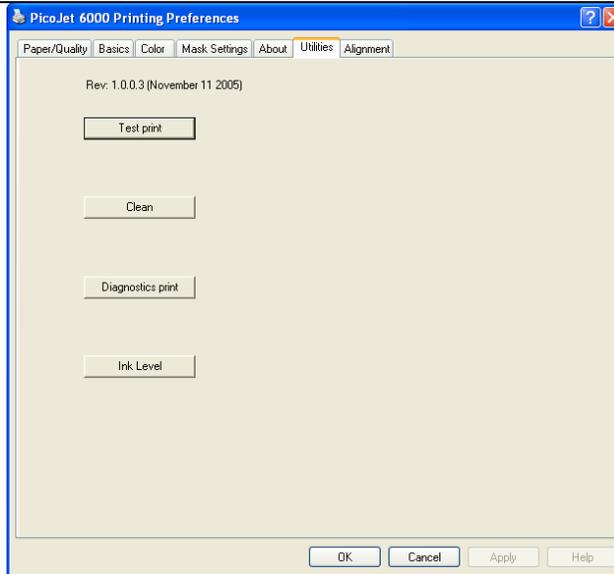


The drivers need to be set up correctly.

The **most important** one is Print Directly to the Printer.

This is found by right clicking on the PicoJet Icon, and selecting Properties. Then choose the Advanced Tab.

Click in the circle next to "Print Directly to the Printer." Be sure to click apply before clicking OK.

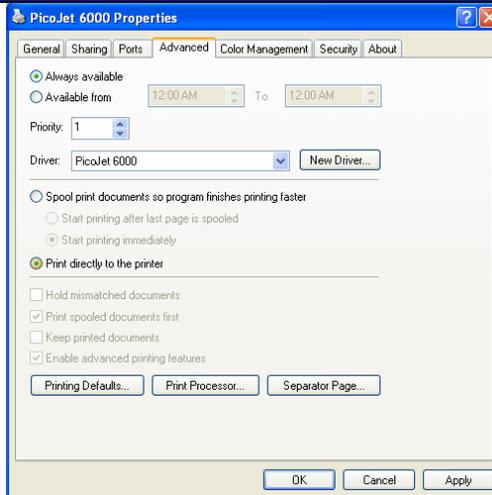

Installing the Picojet Drivers on a "Graphics PC" for generating PRN files.

If you are generating PRN files to print with on your PicoJet Printer, and prefer to generate them on a separate computer other than the duplicator itself. The other PC ("graphics pc") will need to have the PicoJet Drivers installed as well as the SureThing CD Labeler Application.

To install the drivers on your "graphics pc" you'll need the PicoJet Drivers either on the included CD-R or download from the MF Digital Website.

You can then use the Add a Printer Wizard to install the drivers, however at the prompt asking for which PORT the printer is connected to, select the LPT1 Port. Doing this will keep the PicoJet Printer Icon, online. Then continue with the wizard, at the screen asking for the driver files, click the HAVE DISK and point the dialog via the BROWSE button to the X:/enu/drivers/win2kxp folder. Where X is the location of the drive the drivers are located on.

The prompts you will see will be those shown above. Be sure to set the printer to "print directly to the printer" as shown in the very last step of this guide.