

**SA Series**

**MF DIGITAL**

# QUICK CONNECT GUIDE

## *Scribe*

**SA Series**



For a complete guide of instructions, see the manual located on the Manual CD that was shipped with your system.

[www.mfdigital.com](http://www.mfdigital.com)

**MF DIGITAL**

**Software Manual is  
located on Manuals CD  
packaged with your  
system.**

# CARTON CONTENTS

SA Series Loader  
Power Cable

LAN Connection Guide  
LAN Cable

Quick Connect Guide  
Command Module Center Guide


User's Manual CD  
SA Firmware CD

## SA Cabling with no Printer



Simply plug your SA Series into  
AC Wall Receptacle.

# How to Mount Your PicoJet 6000 Printer to the MF Digital SA Series.

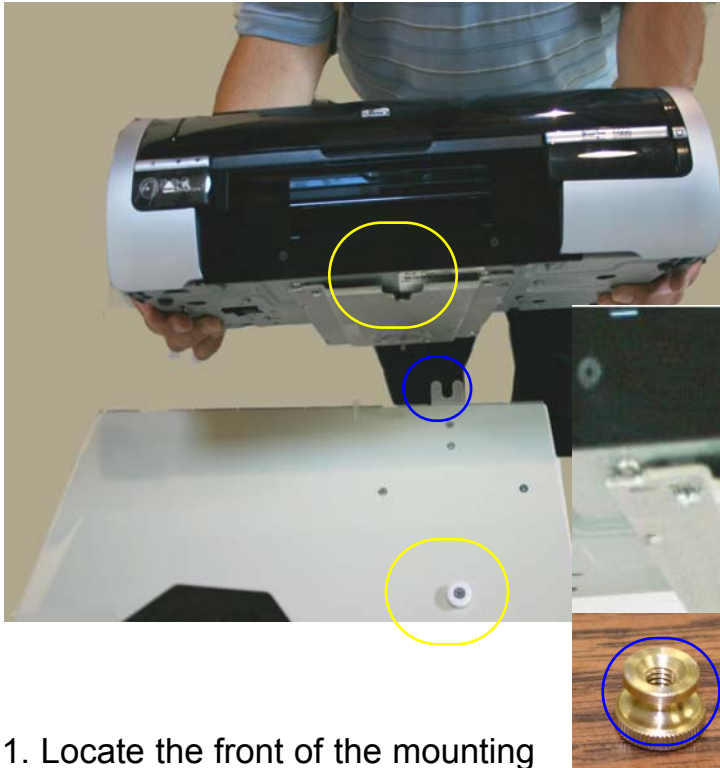


K  
E  
Y


Front

Rear


1. Locate the front of the mounting plate as indicated by the yellow circle to the right.
2. Slip the groove of the mounting plate around the white plastic knob. See picture above (yellow circle).
3. The threaded screw located at the rear of the mounting plate will line up with the "U" shaped housing located on the rear of the MF Digital SA Series Unit. See picture above (blue circle).
4. After mounting the Printer, be sure to push the printer all the way forward then use the Thumbscrew to secure the printer to the MF Digital SA Series Unit.
5. To wire your printer to MF Digital SA Series please follow the wiring diagram to the right.

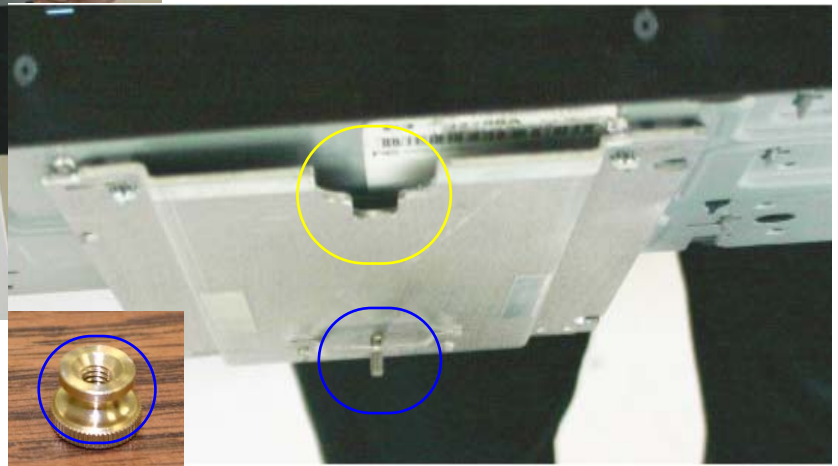

PicoJet 6000  
Printer

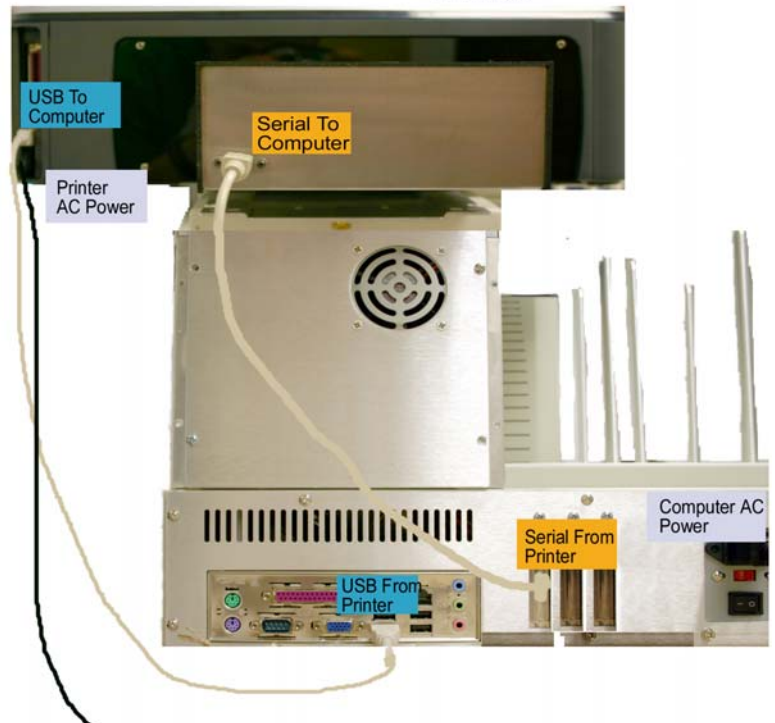


# How to Mount Your Prism Printer to the MF Digital SA Series.

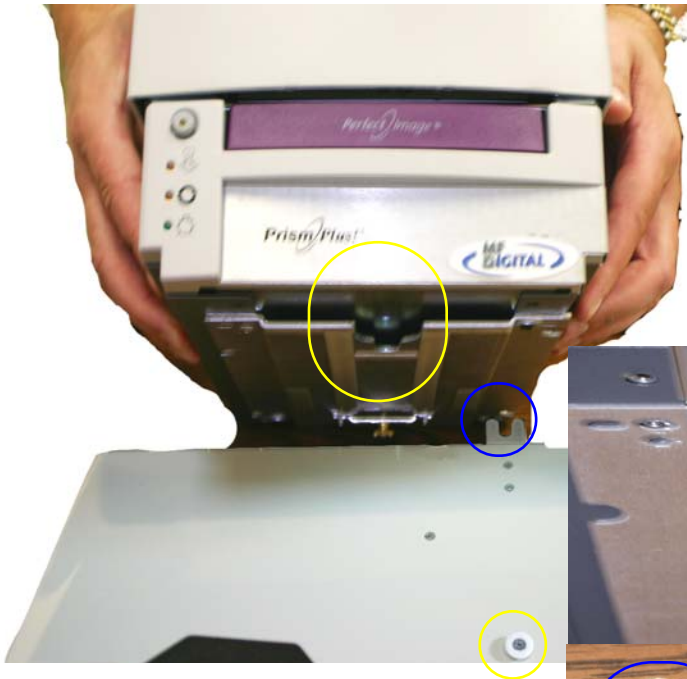


K  
E  
Y

Front

Rear

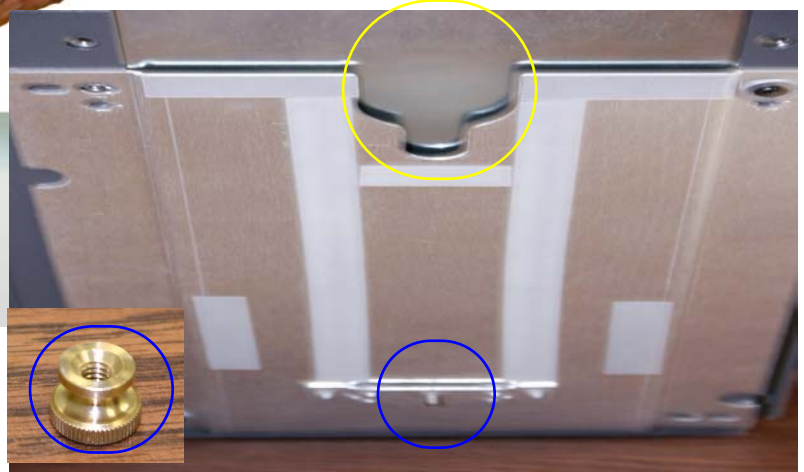

1. Locate the front of the mounting plate as indicated by the yellow circle to the right.
2. Slip the groove of the mounting plate around the white plastic knob. See picture above (yellow circle).
3. The threaded screw located at the rear of the mounting plate will line up with the "U" shaped housing located on the rear of the MF Digital SA Series Unit. See picture above (blue circle).
4. After mounting the Printer, be sure to push the printer all the way forward then use the Thumbscrew to secure the printer to the MF Digital SA Series Unit.
5. To wire your printer to MF Digital SA Series please follow the wiring diagram to the right.

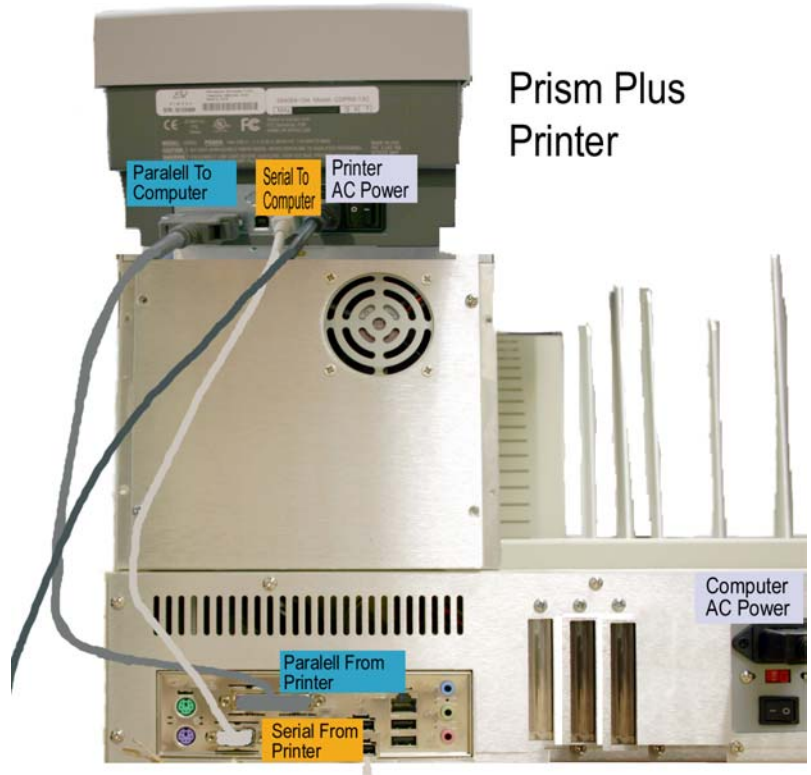


Prism Plus  
Printer

This page left blank intentionally.

# Genuine MF Digital Consumables

## Thermal Printer Supplies

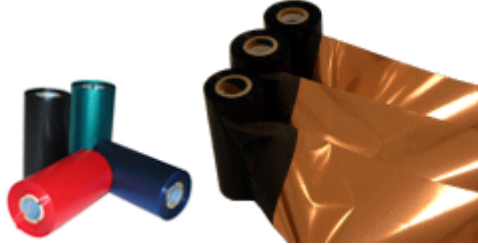

Thermal CD/DVD Printer Ribbons  
The Gold Standard

Part#	Product Description
CDP-PRN-BK	750' Black Ribbon for Prism Plus (Fine Line Print)
CDP-PRN-BLK	850' Black Ribbon for Spectrum 2 Printers
CDP-PRN-RED	656' Red Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-BLUE	656' Blue Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-GRN	656' Green Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-MULTI	656' Multi Ribbon for Prism Plus

## Ink Jet Printer Supplies



Inkjet CD/DVD Printer Cartridges

Part#	Product Description
M56B	Black 19ml Ink Cartridge for PicoJet Inkjet Printer
M57C	Color 17ml Ink Cartridge for PicoJet Inkjet Printer