

QUICK CONNECT GUIDE

Ripstation



Thanks for purchasing a Ripstation from MF Digital. In this box you should find:

1. The RipStation robotic hardware system
2. Power cable & Lan Cable
3. Windows XP CD Pack
4. User Manual is on the Desktop of System

Step-by-step guide of Robotic hardware

STEP ONE – Remove the Packing Constraints

- Place the system on a level workspace free of debris, dust, humidity, excessive heat, and electronic or electromagnetic interference.
- Keep out of direct sunlight.
- Allow at least six inches of clearance on all sides of unit for ventilation.
- Remove Pick Head Tie-Down.

STEP TWO – Start Up

- Plug in a monitor, keyboard and mouse (PS2 or USB) to the Ripstation
- Attach the enclosed Ethernet cable.
- Using the enclosed 3-prong power cord, plug in the autoloader to a properly grounded AC receptacle.

It is highly recommended that a surge protector is used to ensure safety in operation.

- Power on the unit using the main switch at the back and the rocker switch.
- Windows will now load and you will see the Ripfactory Desktop
- Double click the icon for Ripstation to run the ripper application.

www.mfdigital.com



For complete instructions see the user manual located on the desktop of your system