

MF Digital Alignment Commands
***** Must Use Capital Letters *****
06/19/2007

TO USE THE COMMANDS, FOLLOW THE STEPS BELOW:

1. Double click My Computer
2. Double click the C: drive
3. In **RESERVED FOR TECH SUPPORT FOLDER**, double click to open
4. Double click the Icon Loader Diagnostics; this will open a HyperTerminal screen.
5. Turn on your Caps Lock Key and begin to use the commands below.

Printer Alignment Commands

Keyboard key	Description
O	Insert disc onto PicoJet tray
U	Accept disc from PicoJet tray
1	Close printer tray for PicoJet
2	Open printer tray for PicoJet
I	Insert disc into printer tray for Prism / Teac Printers
A	Accept disc from printer tray for Prism / Teac Printers
Ctrl S	Moves disc toward back of printer tray
Ctrl R	Moves disc toward front of printer tray

Drive Alignment Commands

Keyboard key	Description
C	Calibrate (brings picker to home position)
I	Insert disc into drive tray (right side)
K	Insert disc into drive tray (left side)
A	Accept disc from drive tray (right side)
B	Accept disc from drive tray (left side)
Ctrl S	Moves disc toward back of drive (right side)
Ctrl R	Moves disc toward front of drive (right side)
Ctrl P	Moves disc toward back of drive (left side)
Ctrl Q	Moves disc toward front of drive (left side)