

## *Generating a PRN file for the OptiEC PRO printer.*

- 1) Open up SureThing CD Label software as shown on the fig. 1.

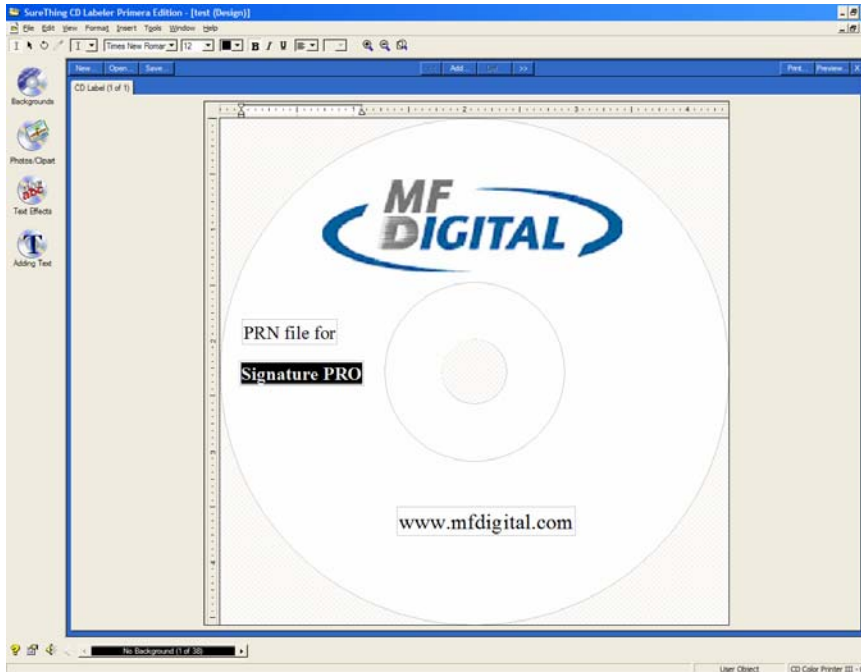


Fig.1 SureThing CD Label software.

- 2) You should save all projects as a SureThing file for future implementation. Go to **File => Save As...** type in a file name.
- 3) To generate a PRN file go to **File => Print...**
- 4) Under Printer option select **CD/DVD Printer 6** then press **Advanced** button. See fig. 2

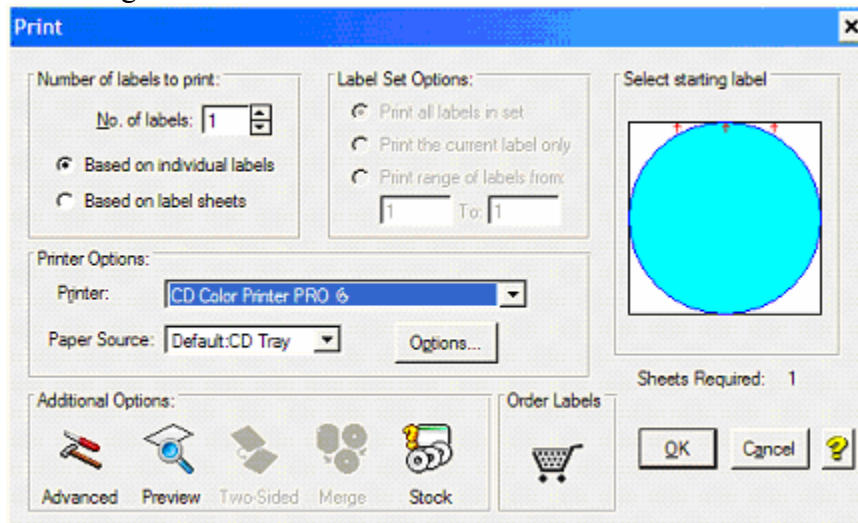


Fig.2 Print window.

5) Check **Print to file** box then press OK as shown on fig.3

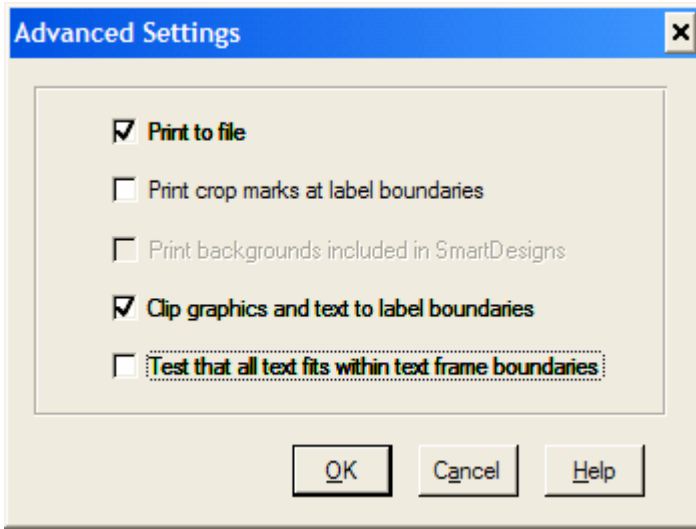


Fig.3 Selecting Print to file option.

6) Press OK button to proceed see fig. 2.

7) Type in the name and location of the output PRN file. You MUST use the ".PRN" extension to successfully generate a PRN file. See fig.4

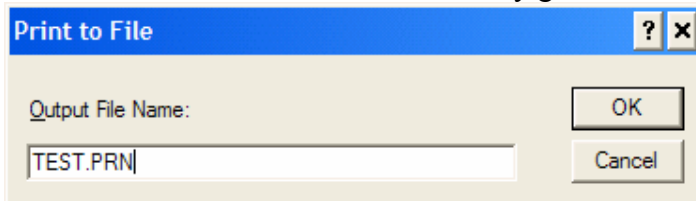


Fig.4 Naming the PRN file.

7) You have successfully generated a PRN file.