

# ***Prism Plus! Setup***

***PrismPlus Setup Guide***



***With SureThing Software***



## Installing the Prism Plus Printer Driver\*

1. Click Start-> Settings-> Printers
2. Click Add New Printer
3. The "Welcome to the Add Printer Wizard" window will appear (fig 1). Click Next.
4. In the "Local or Network Printer" window, uncheck the "Automatically detect installed printer" option, leaving the "Local printer attached to computer" option (fig 2) and click Next..
5. In the "Select a Printer Port" window, leave the default as LPT1 (fig 3) and click Next.
6. In the "Install Printer Software" window, click the "Have Disk" button (fig 4). You will then be prompted to "Install from Disk", click the "Browse" button (fig 5). Select the location of the printer driver from your CD-ROM drive in the PC ( fig 6).

**\* Pre-Installed on 21XX,  
31XX and 91XX Series.  
Excluding 9100 Baxter**

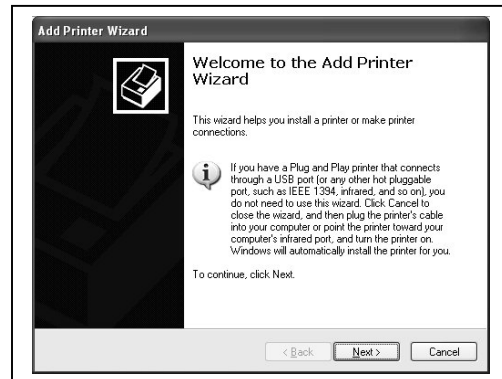


fig 1

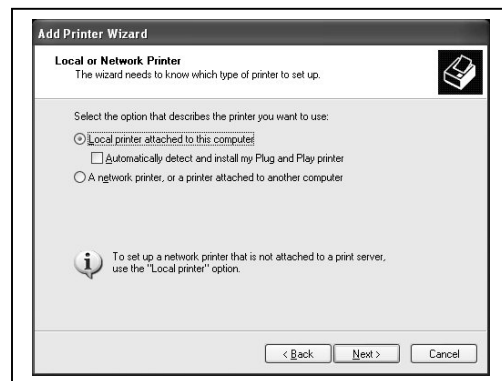


fig 2

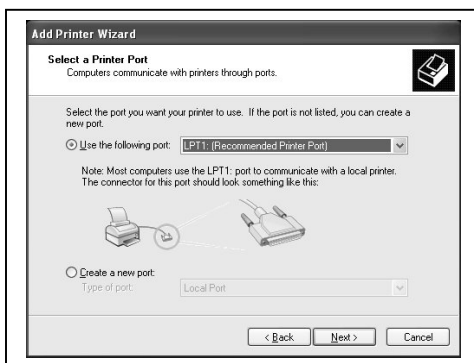


fig 3

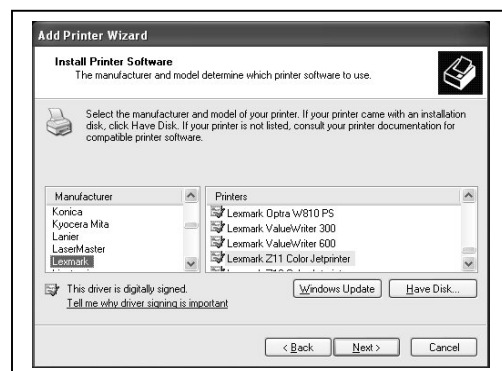


fig 4

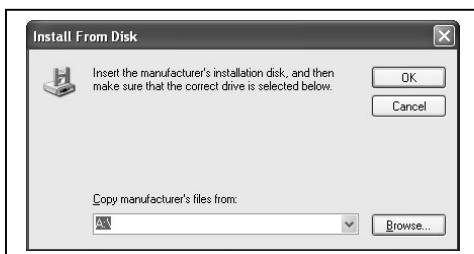


fig 5

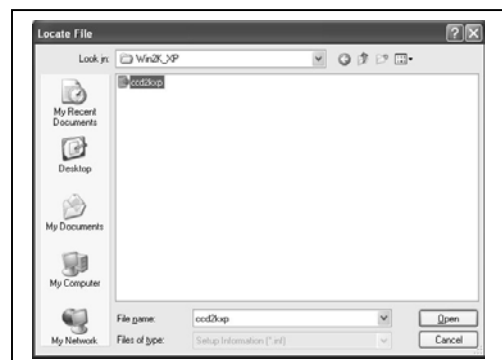


fig 6

## Installing the Prism Plus Printer Driver (cont.)

7. After specifying the driver for the Prism Plus printer, the printer “Rimage Perfect Image Printer PF” will appear in the “Add Printer Window” (fig 7). Click Next to continue.

8. In the “Name your Printer” window, leave the printer as the default name, and select the printer to be the default printer (fig 8) and click Next.

9. In the “Printer Sharing” window, select “Do Not Share the Printer” (fig 9) and click Next.

10. Say No to “Print Test Page” (fig 10) and click next.

11. The “Completing the Add Printer Wizard” window will appear (fig 11). Click Finish. After clicking finish, the Prism Plus printer driver will be installed. You will be asked to accept that the printer driver is not digitally signed by Microsoft, click Continue (fig 12). You have now successfully installed the printer.



fig 7

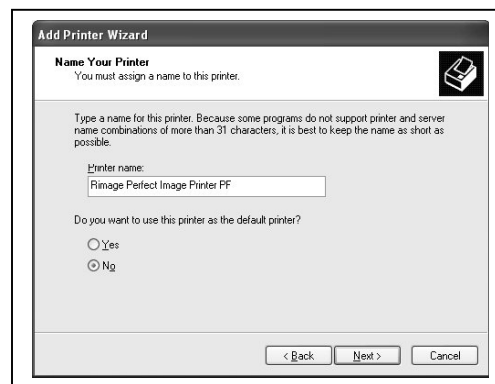


fig 8

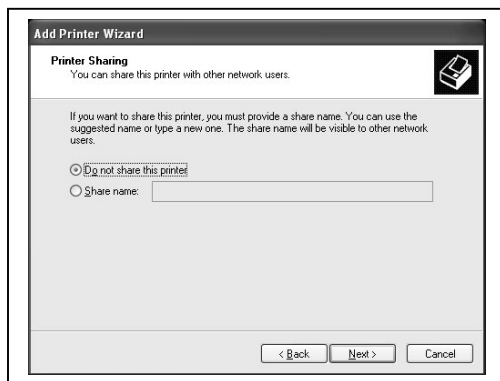


fig 9

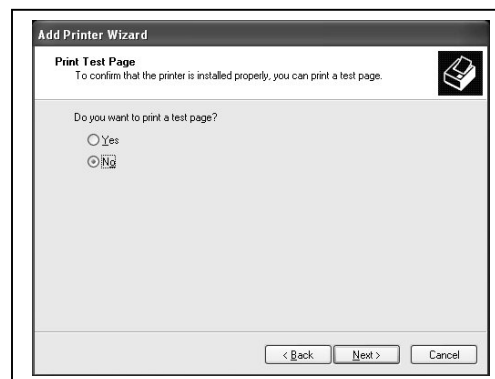


fig 10

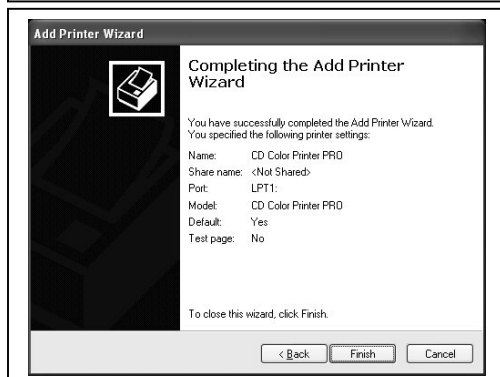


fig 11

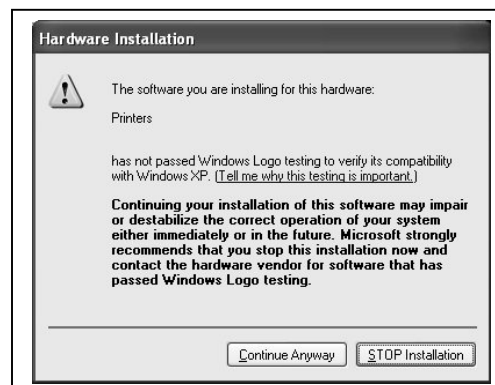




fig 12

## Adjusting the Prism Plus Printer Driver Settings (cont.)

### Device Settings

1. Go to Start-> Settings -> Printers
2. Right-click on the Rimage Perfect Image Printer PF printer in the Printers Folder
3. Go to Properties
4. Go to the Device Settings Tab
5. For the Scribe Program to use the printer effectively, please match the settings of your printer driver to the example on the right-side of this page.
6. To save settings, Click Apply and OK to exit.

\*\*\*NOTE: Any changes made to the printer driver settings, require a NEW PRN file to be made. If you change one of the settings, be sure to create a NEW PRN file.\*\*\*

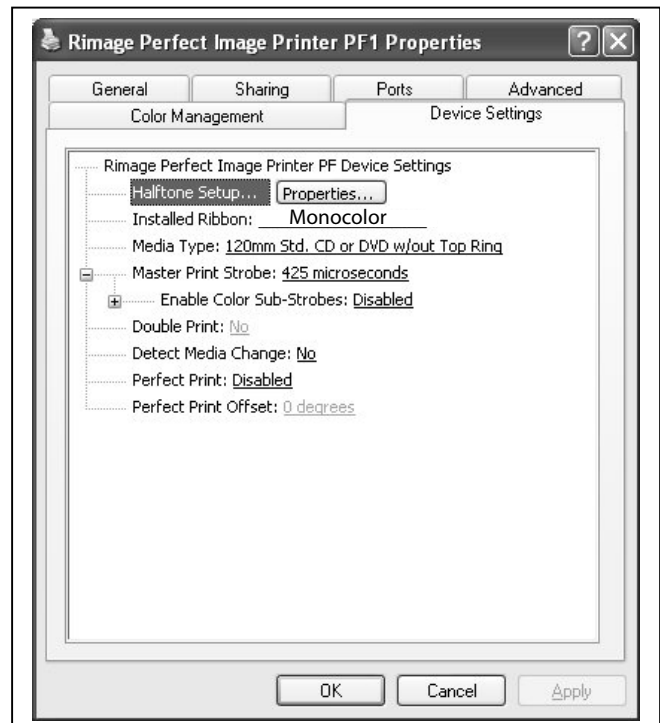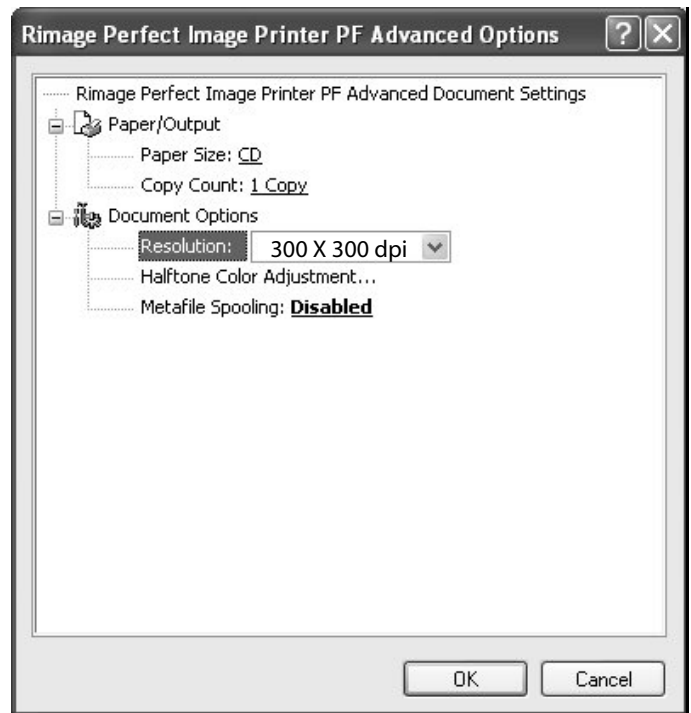

## Installing SureThing Software \*

\* When Prism Plus and Duplicator are purchased together, SureThing Software is pre-installed at the factory  
\*2000 & 9000 Series Only

1. Place CD in Drive and run the SureThing Setup.exe file
2. Click the "I Accept" button on the license agreement (fig1)

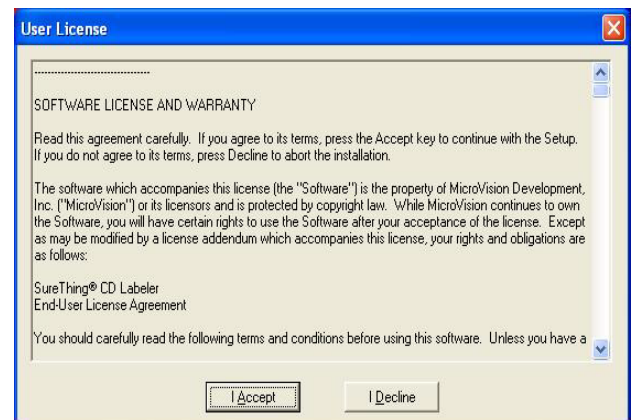


fig1

3. Click "Next" on the Welcome Screen (fig2)



fig2

4. Select Destination Folder, then click "Next" (fig3)



fig3

## Installing SureThing-Continued

5. Click "Next" on the Add to Desktop Menu (fig4)

fig4



6. On the Ready to Install screen, click "Start" (fig5)

fig5



7. Click "Finished" to Complete (fig6)

fig6



# Important Notes

---



Note:

The maximum resolution for a .STD file is 600 dpi. If print image exceeds 600 dpi, a .PRN file must be used.

---



Note:

When submitting the PDF file to print, please make sure the target printer is NOT the Default printer. (For Example If printing to Prism -Prism cannot be the default printer) If needed, add a dummy Printer to the printers and faxes directory.


---

Any Questions Please Contact  
Technical Support  
631 249-9393 ext 217




# *Creating an STD file*

1. Open SureThing CD Label Software as shown in Fig. 1.

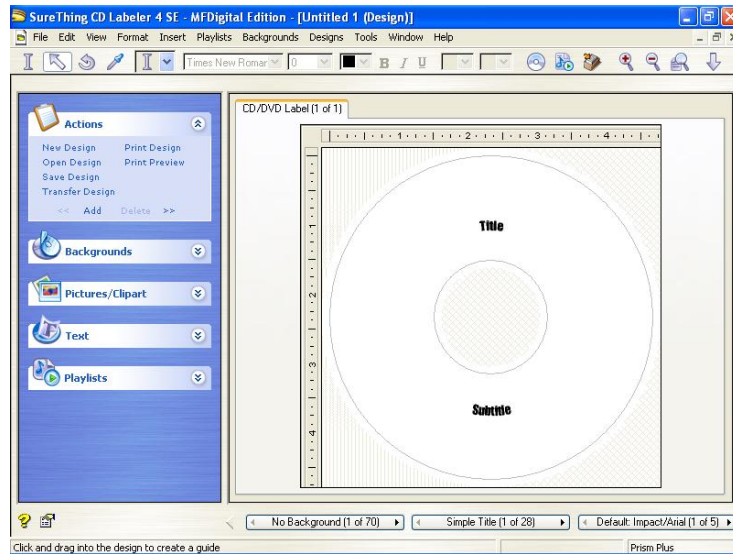

2. Add text and images to your label.

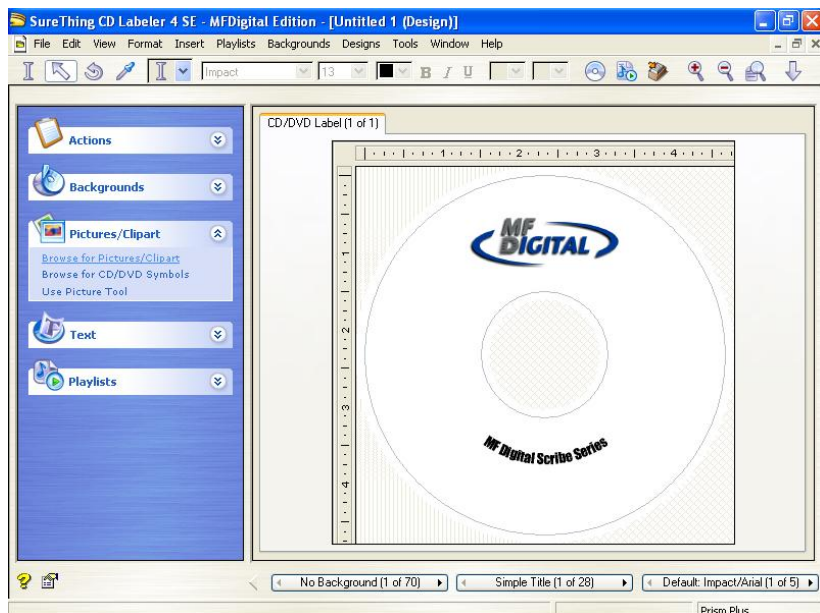

3. Save the STD file that you just created and you are ready to go!

---

Note:

For information on creating .PRN files, Please see your user manual. The user manual is located on the User Manual CD that came with your MF Digital Duplicator.

---

This Page Intentionally Left Blank



## Thermal Prism Ribbons CD/DVD Printer Ribbons The Gold Standard

To Order Prism Ribbons or Inkjet printer supplies

Call 001 631 249-9393 x205

[www.mfdigital.com](http://www.mfdigital.com)

PART#	DESCRIPTION
CDP-PRN-BK	750' Black Ribbon for Prism Plus (Fine Line Print)
CDP-PRN-RED	656' Red Ribbon for Prism Plus & Spectrum 2 Printers
CDP-PRN-BLUE	656' Blue Ribbon for Prism Plus & Spectrum2 Printers
CDP-PRN-GRN	656' Green Ribbon for Prism Plus & Spectrum2 Printers
CDP-PRN-MULTI	656' Multi Ribbon for Prism Plus